



SLPARKER

Web Site & Graphic Design

t: 01507 568390
www.slarker.co.uk
www.laserdesigns.co.uk
enquiries@slarker.co.uk

T0710X4S* & T080X6S* Refillable Ink cartridge Instructions

When the ink runs low in your Epson printer an X or X's will show in your ink level monitor, remove all the cartridges from the printer, refill them as normal, replace them in the printer just like you would replace the original Epson ink-jet cartridges, the cartridges will be reset to full again! For your first fitting of these auto-reset cartridges remove all original cartridges and switch printer off for [2 minutes at the wall socket] then switch the printer back on and insert new cartridges.

Refilling Instructions: To refill the cartridges remove both the fill and air inlet plugs, refill the cartridge through the hole indicated. When placing the cartridges into the printer please make sure you remove plug from the air inlet hole or the ink will not flow and will remain in the cartridge. The outlet valve on the refillable printer cartridge is spring loaded so there is no leakage when the cartridge is removed from the printer.

For the initial fill we advise filling the cartridge with 10 millilitre of ink (the max shown on the syringe). When the ink level shows around 20% refill with 8ml of ink. Warning: The cartridges must be used as a full set do not mix with originals or other compatibles. If you get a problem whilst setting up these cartridges please visit our F.A.Q's troubleshooting page on our web site: www.slarker-rcmp.co.uk

