



SLPARKER

Web Site & Graphic Design


t: 01507 568390
www.slparker.co.uk
www.laserdesigns.co.uk
enquiries@slparker.co.uk

Epson © Compatible Chip Resetter Instructions

LD-YXR Chip re-setter is suitable for following printer model:

S22-SX125-SX420-SX425-BX305-SX525-BX320-SX620.

The LD-YXR chip re-setter can reset the following Epson © original printer cartridges: T01281-T01282-T01283-T01284-T01291-T01292-T01293-T01294 all you have to do is make sure the ink level has **not dropped below 30%** on your ink monitor, the reason for this is that inside the cartridge there is also a ink level sensor behind the chip which is always immersed in the ink, and when the air reaches the sensor it will disable the chip so you can not reset the cartridge. For 99% of compatible ink cartridges this problem will not arise because they are manufactured without the sensor and they will reset when showing empty!

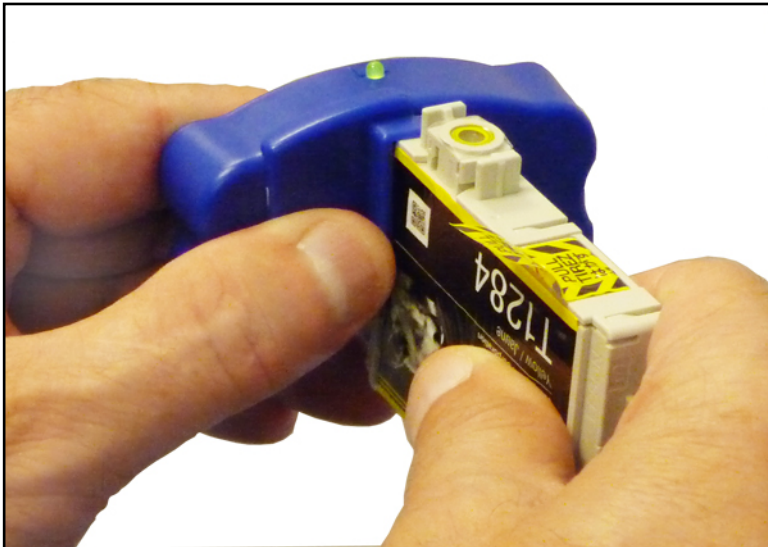

The resetting process is simple just align the cartridge IC chip against the 7 pins on the chip re-setter using the PVC guide that comes with the unit.

Press the chip firmly against the pins, the red light will flash for around 2 seconds followed by a continuous green light, now remove from the re-setter and refill the cartridge before placing it back into the printer, where it will now show full again.

Please note if you don't want to go through with the process above why not buy some of my refillable ink cartridges which are easily reset and made for permanent use in your Epson © printer. Visit my web site www.laserdesigns.co.uk for more information.