

CANON AUTO-RESET REFILLABLE INK CARTRIDGE INSTRUCTIONS

Below is a diagramme of the new auto-reset ink cartridges for various Canon ink jet printers and a small description of the product.



To fill the cartridges leave the orange protective cover on! Remove the coloured rubber stopper then fill each cartridge with the correct colour ink until the ink is around 2mm from the top (you must leave a small air gap) replace the rubber stopper. Now remove the orange protective cover and pull off the yellow strips this will enable the ink to flow freely, now insert the cartridges into the printer.

When the cartridge ink level shows empty remove the cartridge from the printer, top up with ink and replace the rubber stopper, re-insert the cartridge it should now be reset, if not switch the printer off for 30 seconds this will reset the memory in the printer and all the cartridges will show full again. We advise that you use surgical gloves throughout the refilling process and refill over a sink. Please note you will need 10ml syringes to refill the cartridges, you can purchase these from our web site.

If you purchase this product from Laser Designs and you need help please call 01507 568390 Leave a message if no one is available, we will call you back! www.laserdesigns.co.uk