



## INSTRUCTIONS FOR HP (88) and the HP 10-11 CONTINUOUS INK SUPPLY SYSTEM

Fill the ink storage tanks with ink, insert the air filters into the small holes at the rear of the tanks. Use the syringe supplied **without** the needle attached, push the syringe nozzle into the ink cartridge where it says fill, now draw on the syringe to create a vacuum in each cartridge, this will cause the ink to flow into the cartridge, when the cartridges are full (they each hold 28ml of ink) insert the coloured ink stopper to stop any leaks. Insert the cartridges into the printer and route the pipes out of the cartridge cover using the mounts supplied.

Every so often have a visual check on the cartridges to make sure they are full of ink, if you let them run out this will cause the ink heads to be depleted of ink, when this happens you will have to replace the ink heads. To ensure the system operates correctly you must keep having large print runs, of say 500 sheets of paper if you do not intend using the system for this type of volume we would suggest that you purchase our refillable ink cartridges instead! On the K5400 if an empty light should show open the cartridge carrier door flap and close it after 1 minute the light will re-set then carry on printing.

On the L7480 all in one printer sometimes in the ink level monitor it will show a ? mark usually on the black cartridge, ignore this error and carry on printing after a while open the cartridge carrier door flap after a minute, close the door flap, the black ink monitor should now show full again.

## INSTRUCTIONS FOR HP (88) and the HP 10-11 ARC REFILLABLE INKJET CARTRIDGES

Remove the ink stoppers from the ink fill hole and the air flow hole, fill the cartridges with ink through the ink fill hole (they each hold 28ml of ink) if you want to store the cartridges for use another time replace the coloured stoppers. When you want to use the cartridges remove the stopper from the air hole only this allows the ink to flow freely.

Every so often have a visual check on the cartridges to make sure they are full of ink, if you let them run out this will cause the ink heads to be depleted of ink, when this happens you will have to replace the ink heads which can turn out very expensive!

On the L7480 all in one printer sometimes in the ink level monitor it will show a ? mark usually on the black cartridge, ignore this error and carry on printing after a while open the cartridge carrier door flap after a minute, close the door flap, the black ink monitor should now show full again.

## INSTRUCTIONS FOR HP 363 ARC REFILLABLE INKJET CARTRIDGES

All our HP 363 cartridges are fitted with the latest type of auto-reset chips and will fit all HP printers which accept this cartridge no matter when the printer was made. The cartridges will reset when the ink level reaches around 5%. We advise you not to overfill the cartridges or it can get messy! Just fill the smaller cartridges with 12ml of ink and the larger black with 33ml of ink, replace the rubber stoppers before you insert the cartridges into the printer. The cartridges are see through for your convenience. You do not have to remove the cartridge from the printer to refill, just top them up and keep printing they will auto reset by themselves. Save £££'s on your printing up to (90%) saving on OEM cartridges. Purchase our HP compatible inks and save even more money!

## INSTRUCTIONS FOR HP 364 REFILLABLE INK CARTRIDGES

To setup the HP 364 cartridges first remove the orange protective covers, then remove the chips from your original HP cartridges and fit them in the right order to the refillable ink cartridges using a small dab of all purpose glue. Now replace the orange protection covers and fill each cartridge with the correct colour ink and replace the coloured stopper. Remove the orange protective covers and insert the cartridges into the printer, pull off the yellow tape this will let the ink flow. The cartridges are see through so when the ink is showing low top the cartridges while they are still in the printer this helps avoid ink leaking from the ink outlet, if you remove the cartridges from the printer to fill them, re-fit the orange protective covers, fill with ink, replace the rubber stoppers, then remove the orange protective covers and re-insert the cartridges into the printer.